


Gapmeter Type PGU Screwed

REPLACEMENT OF TUBE ASSEMBLY AND O-RINGS

1. Remove bezel and screws.
2. Remove metal spring clip by pulling forwards.
3. Remove one of the end inserts from its location in the housing.
4. Force the tube to the gap vacated by the end insert until clear of the other end insert.
5. Pull the tube clear, tilting slightly.
6. O-ring replacement should be carefully carried out ensuring that no surfaces are damaged. Moistening the O-rings or using a small amount of suitable grease is advisable.
7. To replace the tube assembly, reverse the above procedure using the plastic wedge now as a sliding wedge.

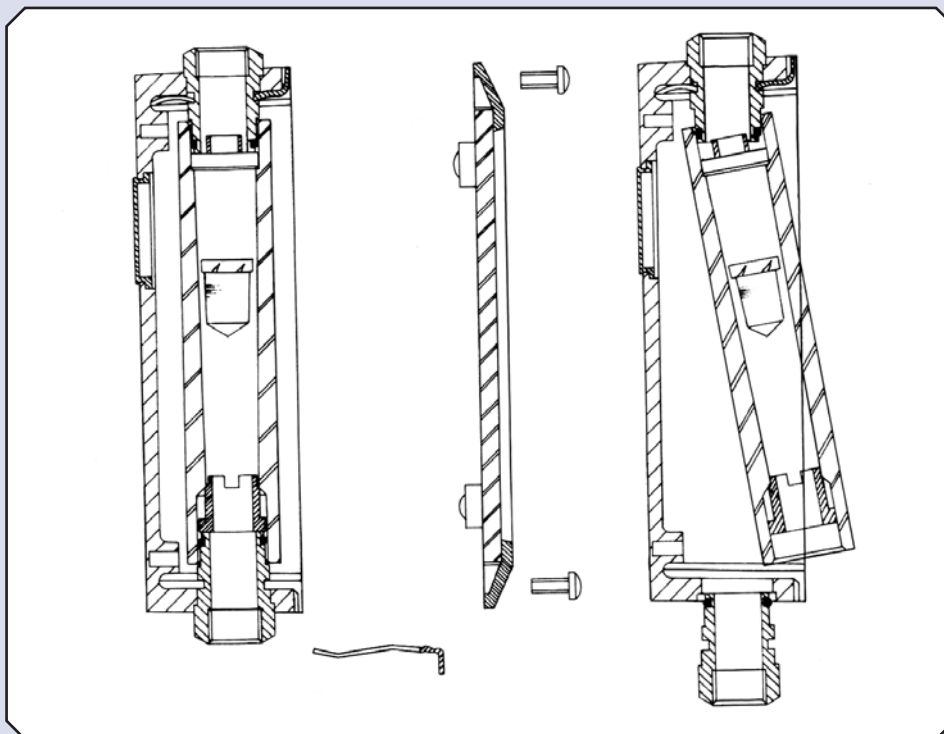

Every effort has been made during the preparation of this document to ensure the accuracy of statements and specifications. However, we do not accept liability for damage, injury, loss or expense caused by errors or omissions made. We reserve the right to withdraw or amend products or documentation without notice.

Head Office: 2 Downgate Drive, Sheffield, S4 8BT, England
Tel: +44(0)114 244 2521 Fax: +44(0)114 243 4838



RM&C Roxspur
Measurement
& Control Ltd

1-4 Campbell Court, Bramley, Tadley, Hampshire, RG26 5EG, England

Tel: +44(0)1256 884901 Fax: +44(0)1256 882986

email: sales@roxspur.com www.roxspur.com



CERTIFICATE No. FM22358

Before returning any goods to RM&C you must obtain a Returns form containing a unique returns (CA) authorisation number. Failure to do so will result in the goods being returned to you, without any inspection, etc... To obtain this form, contact the Q.A. department of our Sheffield office and by return the form will be faxed to you.

On receipt of the Returns form, fill in any required fields and return it with the goods to the Sheffield office. It is advisable to keep a copy of this form (with authorisation no.) for reference purposes.

If the goods have come in contact with any processes or environments that may be harmful to a user, then COSHH Regulations must also be observed. It is requested that a Material Safety Data Sheet (MSDS) is also supplied with returned goods, if this is likely to be the case. If not provided and the goods are suspected of being contaminated, they will be returned to you.

On receipt of appropriate documentation the goods will be examined & assessed in accordance with the terms of any Warranty agreement.

Repairs

Prior to any repair work being carried out, you will be informed of our findings & any charges that may be incurred.

Replacements

Prior to the supply of any replacements, you will be informed of our findings & any charges that may be incurred.

No replacements will be sent prior to receiving the goods back from you, unless an Order number is supplied to cover the cost of the new unit/s. After inspection, etc... of the returned goods a Credit may be issued, based on our findings

Warranty (extract from Terms & Conditions)

The warranty period is normally 12 months from the date of shipment, except as agreed at the time of sale.

Any misuse of the goods will void any warranty.

For full Warranty & other Contract details refer to our 'Terms & Conditions'.

Every effort has been made during the preparation of this document to ensure the accuracy of statements and specifications. However, we do not accept liability for damage, injury, loss or expense caused by errors or omissions made. We reserve the right to withdraw or amend products or documentation without notice.

Head Office: 2 Downgate Drive, Sheffield, S4 8BT, England
Tel: +44(0)114 244 2521 Fax: +44(0)114 243 4838



1-4 Campbell Court, Bramley, Tadley, Hampshire, RG26 5EG, England
Tel: +44(0)1256 884901 Fax: +44(0)1256 882986
email: sales@roxspur.com www.roxspur.com

